

## Parts List (S-75)

Part #	Description	Q'ty	Part #	Description	Q'ty
1	Stand	1	37	Eye Protector	1
2	Hex. Screw M12x30	2	38	Nut M4	2
3	Washer	2	39	Block With Thread	1
4	Paper Spacer	2	40	Contact Wheel	1
5	Clamp for angle & height adjustment	2	41	Hex. Screw M10x15	2
6	Nut M10	4	42	Washer	2
7	Washer	4	43	Work Support	1
8	Washer	4	44	Screw M5x16	1
9	Hex. Screw M10x20	4	45	Stop Ring	2
10	Hex. Screw M5x10	2	46	Bearing	2
11	Washer	2	47	Shaft	1
12	Hex. Screw M12x50	2	48	Spacer	2
13	Body	1	49	Motor Support	1
14	Motor	1	50	Nut	1
15	Washer	1	51	Butterfly Spring	1
16	Belt Tension Release Base	1	52	Screw Bar	1
17	Inner Hex. Screw M8x20	1	53	Washer	2
18	Belt Tension Release Lever	1	54	Base	1
19	Sleeve	1	55	Screw M6x25	2
20	Shaft	1	56	Shaft	1
21	Belt Guard	1	57	Elasticity Pin	1
22	Tracking Adjust Knob	1	58	Eccentric Wheel	1
23	Washer	1	59	Washer	4
24	Graphite Layer	1	60	Bolt M8x22	4
25	Nut	2	61	Spring	2
26	Hex. Screw M10x15	3	62	Spring	2
27	Washer	2	63	Elasticity Pin	2
28	Top Work Support	1	64	Pin Shaft	1
29	Top Work Support Plate	1	65	Stop Ring	3
30	Lock Handle	1	66	Draw Bar	1
31	Washer	1	67	Butterfly Spring	12
32	Eye Protector Base	1	68	Support	1
33	Screw M5x8	2	69	Belt Adjustment Device	
34	Hex. Screw M5x50	1	70	Screw	1
35	Screw M4x12	2	71	Protect Buckle	1
36	Eye Protector Binder	1	72	Butterfly Spring	2

Part #	Description	Q'ty	Part #	Description	Q'ty
73	Screw M8x20	1	79	Spark Trap	1
74	Washer	1	80	Bolt M8x15	1
75	Side Cover	1	81	Washer	1
76	Bolt M10x30	1	82	Knob	1
77	Washer	1	83	Overload Protection Switch (Only available for CE)	1
78	Steering Wheel	1			

MACHINERYHOUSE

