

## Changing Sino SDS2MS DRO to read in Radius or Diameter

Press the Decimal point button during the initial start-up process to access the setup menu.



The first parameter in the menu is "X RESLN" (X resolution)

- 5 = Radius display.
- 10 = Diameter display.



Enter the desired setting, 5 Radius measurements or 10 for diameter measurements, then press enter.

Press the Decimal point button to exit the setup menu.

